

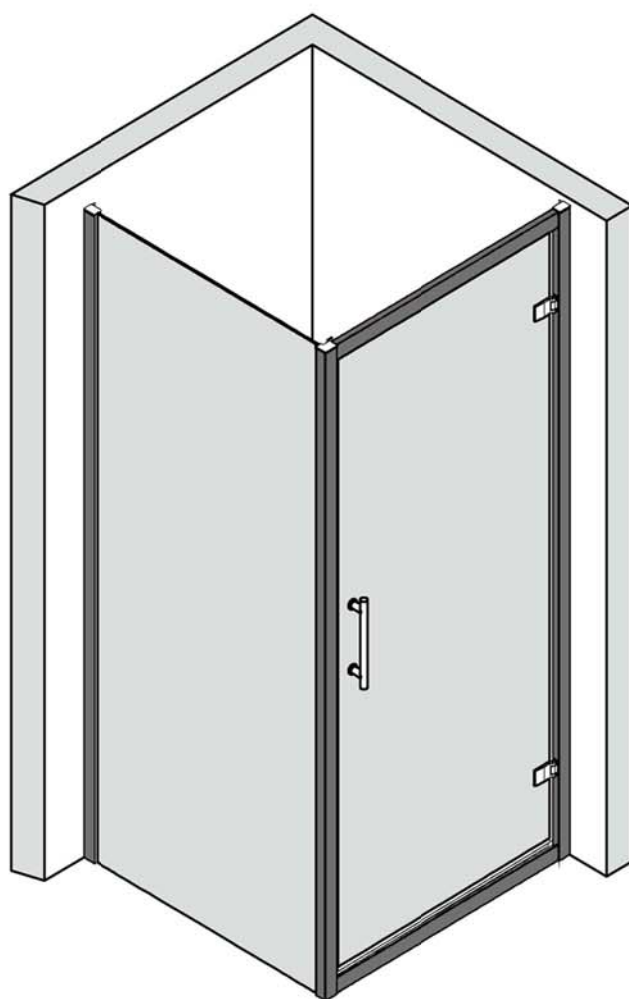


Návod na montáž
SK-QS800/900/1000 pre kombináciu
s SK-Q6 80/90 a SK-Q7 10


(SK-HQS800/900/1000 pre kombináciu s SK-HQ6 80/90 a SK-HQ7 10)

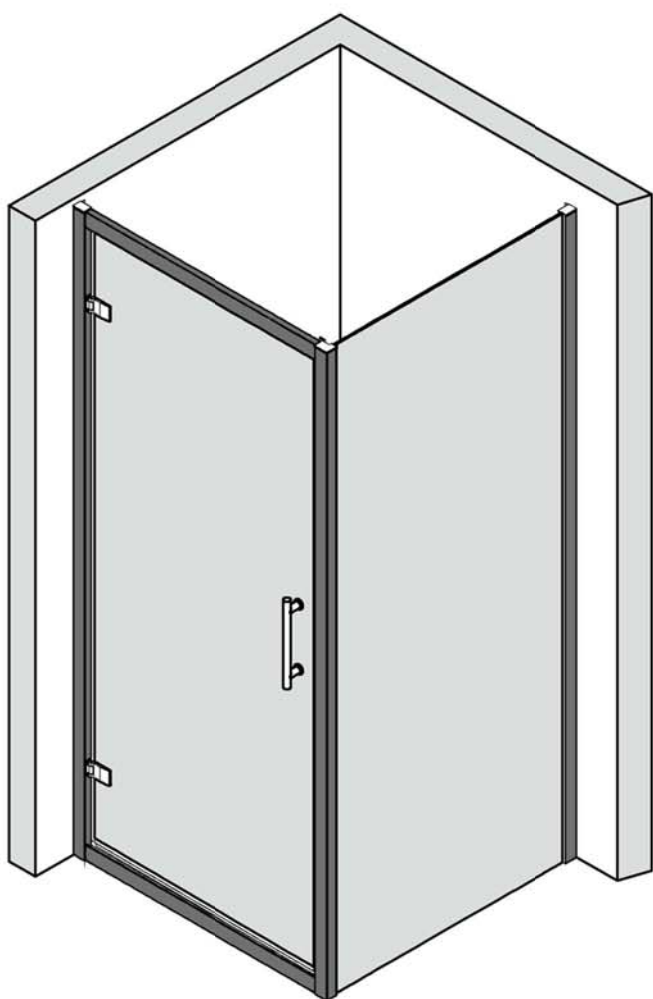


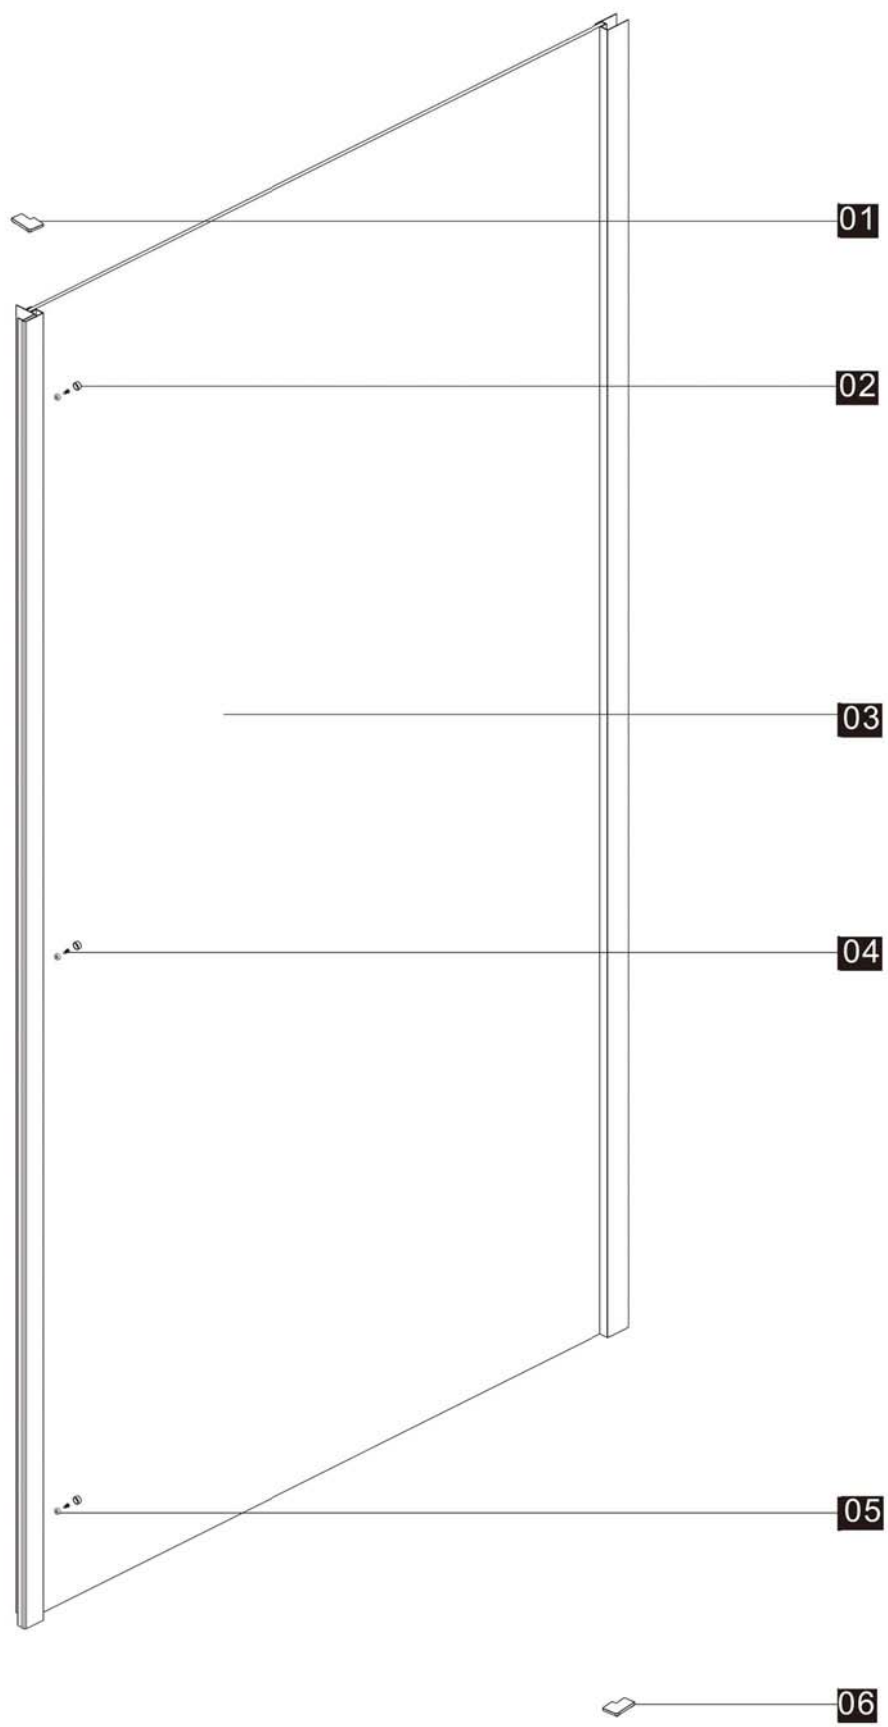


číslo položky	Nákres	Vel'kost' (mm)	Počet
01			1
02			3
03			1
04		ST 3.5X9.5	3
05			3
06			1



Potrebné náradie:

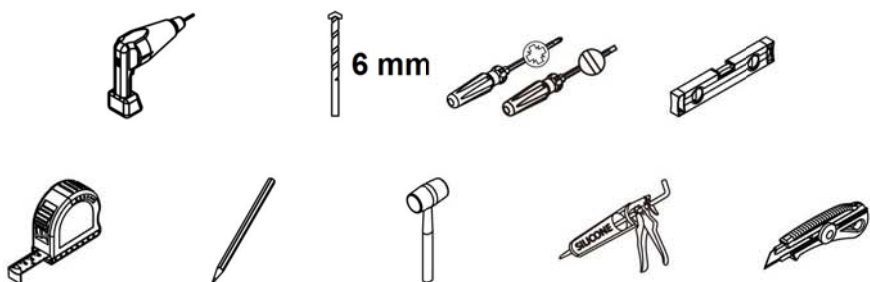

1

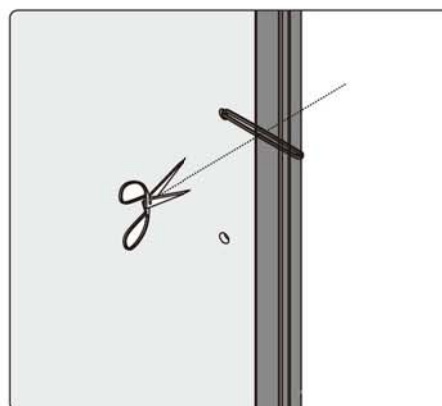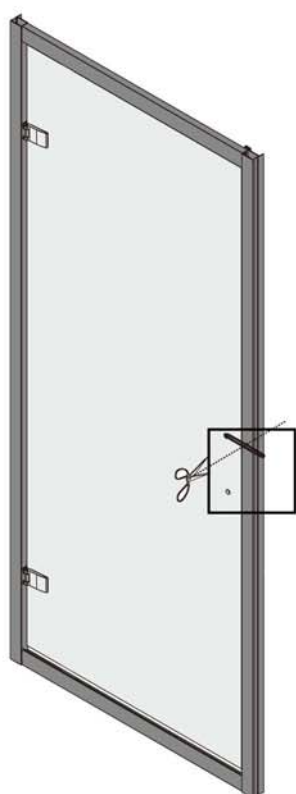

2

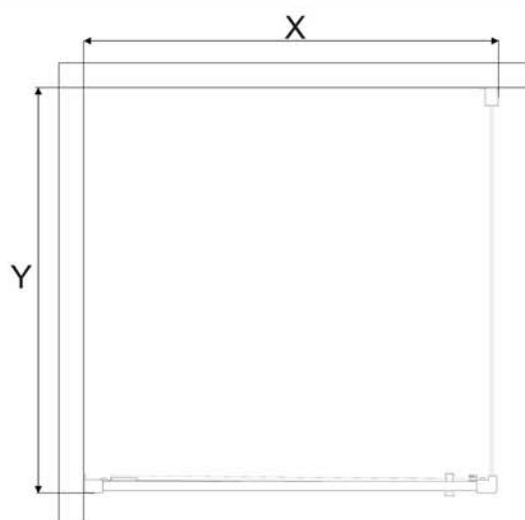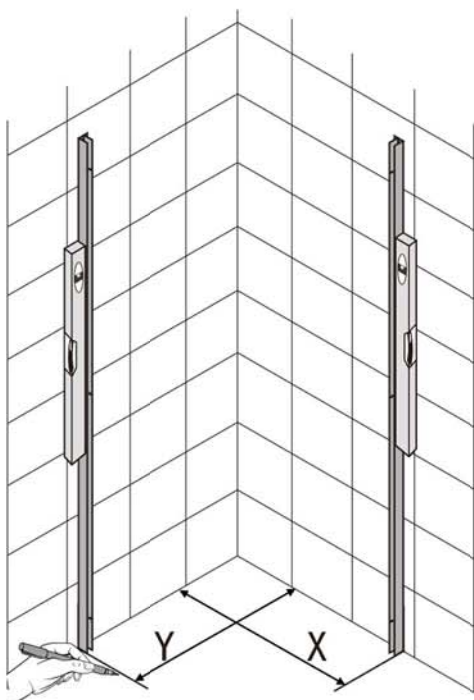

(mm)	X	Y
800X800	785~800	785~800
800X900	785~800	885~900
900X800	885~900	785~800
900X900	885~900	885~900
1000X800	985~1000	785~800
1000X900	985~1000	885~900

